


# PLASTIC SCALE MODELS

ALL PARTS MOLDED TO SHAPE • EASY TO ASSEMBLE

SKOKIE, ILLINOIS

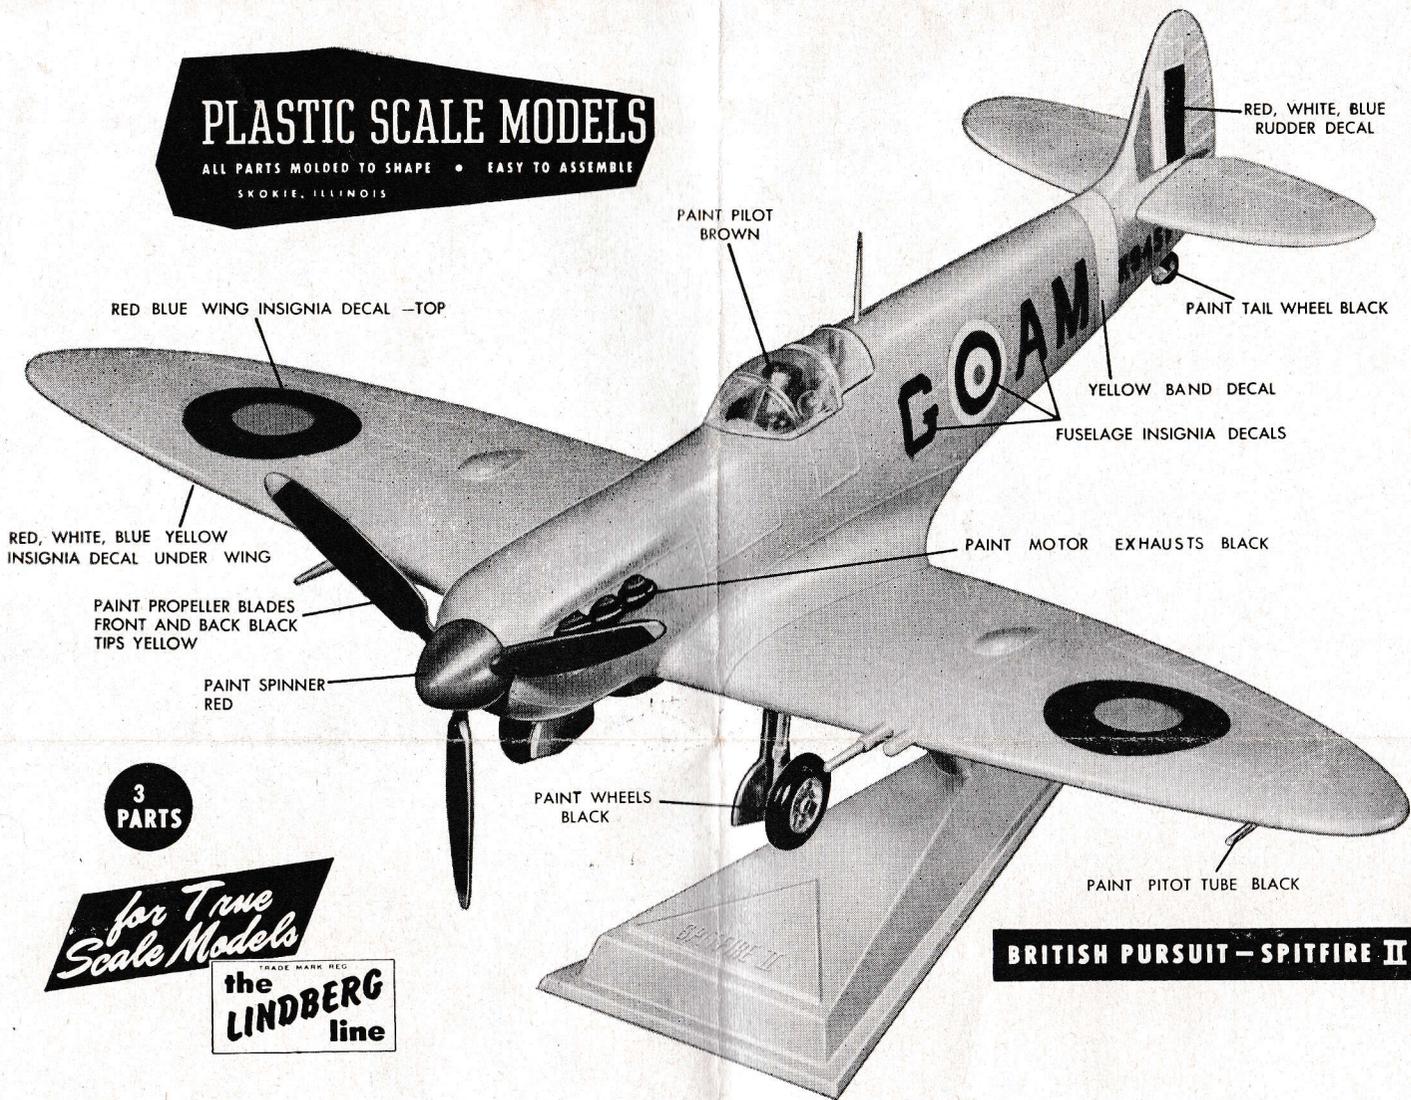

3 PARTS

*for True Scale Models*  
TRADE MARK REG  
**the LINDBERG line**

**BRITISH PURSUIT - SPITFIRE II**

MANUFACTURED UNDER LICENCE BY

**MODEL TOYS LTD., 11, GOLBORNE ROAD, LONDON, W.10**

MADE IN ENGLAND

FOR BEST ASSEMBLY RESULTS USE LINDBERG PLASTIC CEMENT. IF NOT, AVAILABLE USE CARBON TETRACHLORIDE OR CARBONA CLEANING FLUID AS A SUBSTITUTE.

A


ASSEMBLE MODEL IN SUGGESTED NUMERICAL SEQUENCE.

B

7 CEMENT PILOT ASSEMBLY INTO BODY


2 SLIDE SHAFT THRU BEARING INTO PROPELLER CEMENT IN NOSE

1 APPLY CEMENT ALONG EDGES OF BODY HALVES AND CAREFULLY ASSEMBLE

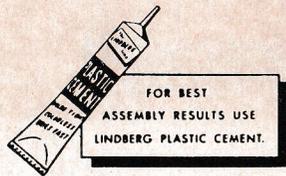

KIT NO. 518  
BRITISH PURSUIT  
**SPITFIRE II**

8 CEMENT COCKPIT CANOPY INTO PLACE ON BODY

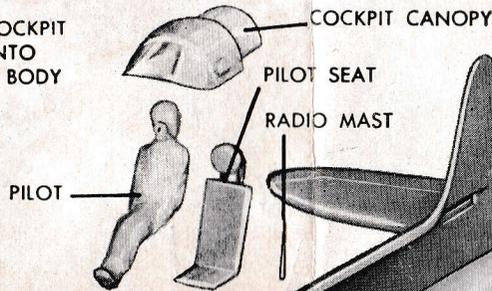

IF MODEL IS TO BE PAINTED USE ENAMEL ONLY. DO NOT USE LACQUER OR LACQUER BASE MATERIALS AS THESE SOFTEN THE PLASTIC. APPLY ALL DECALS AFTER MODEL IS PAINTED.

C

D TRIM OFF EXCESS FLASH FROM ALL PIECES BEFORE ASSEMBLING. USE RAZOR OR KNIFE. CUT CAREFULLY.




NOTE: PARTS THAT FIT SNUG, APPLY CEMENT FIRST TO EASE TENSION

E


3 CEMENT ELEVATORS INTO SLOTS IN RUDDER

4 APPLY CEMENT TO EDGES OF WING HALVES AND ASSEMBLE WING PANELS

5 APPLY CEMENT TO ENDS OF WING HALVES AND CEMENT INTO BODY

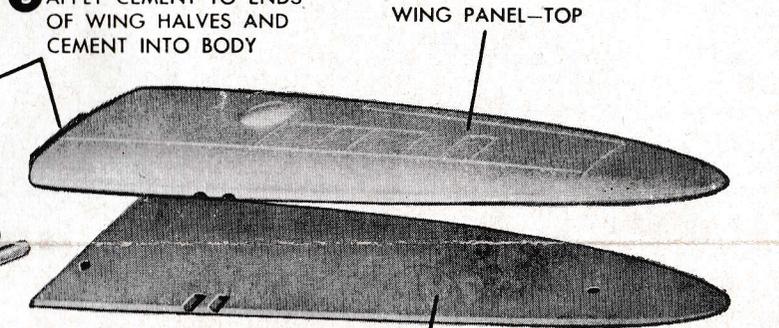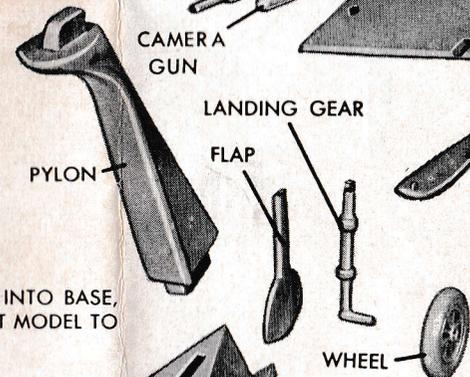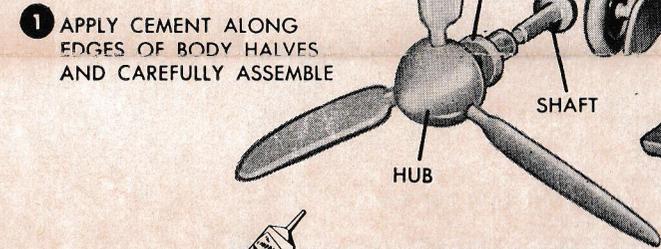

9 CEMENT PYLON INTO BASE, LET DRY, CEMENT MODEL TO PYLON TOP.

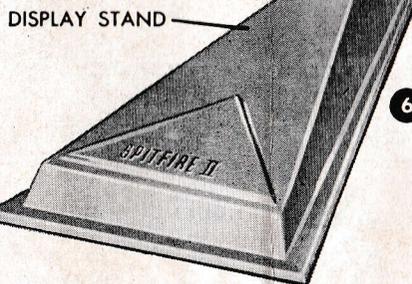

6 CEMENT LANDING GEAR FLAPS RADIATORS CANNON CAMERA GUNS RADIO MAST AND PITOT TUBE IN PLACE

