1:72 AUTHENTIC SCALE GRUMMAN A-6A INTRUDER



GRUMMAN A-GA INTRUDER

U.S. Navy attack carriers. two-seat lowlevel shipboard strike aircraft entered operational service in 1964. It employs AGM-12 Bullpup air-tosurface missiles modified to operate with automatic radar techniques. This is also equipped with a Digital Integrated Attack System (DIANE), the primary components of which are terrain mapping, search and Doppler air data and central digital computers, and an automatic fight Max, speed, 685 m.p.h. (Mach 0.9) control system.

72 COLLECTORS SCALEKITS

No. 1 ··· MIKOYAN MIG-21 FISHBED.

No. 2 ··· LOCKHEED F-1041 STARFIGHTER.

No. 3 ··· REPUBLIC F-105D THUNDERCHIEF.

No. 4 ··· KAWANISHI TYPE 2 FLYING BOAT(H8K2).

No. 5 ··· NORTH AMERICAN F-86F SABRE.

No. 6 ··· NORTHROP F-5A FREEDOM FIGHTER.

No. 7 ··· NORTHROP T-38A TALON (F-5B).

No. 8 ... L.T.V. CORSAIR II.

No. 9 ... B.A.C. LIGHTNING F-MK.G.

No.10...McDONNELL PHANTOM II F-4K.

No.11...McDONNELL PHANTOM II F-4J.

No.12...18-SHI ATTACK BOMBER RENZAN "RITA".

No.13...NORTH AMERICAN-ROCKWELL OV-10A BRONCO.

No. 14...LOCKHEED P-38 LIGHTNING.

No 15...WESTLAND GANNET.

No.16...MESSERSCHMITT ME-410.

No 18...NORTHROP P-61 BLACKWIDOW.

No. 19...FOKKER F-7B-3M SOUTHERN CROSS.

No 20 · · · VICKERS VIMY.

No.21...GRUMMAN OV-1A or C.MOHAWK.

No.22...GRUMMAN OV-1B or MOHAWK.

No.23...SAAB AJ-37 VIGGEN.

No.24 ··· NORTH AMERICAN-ROCKWELL RA-5C VIGILANTE.

No.25...WESTLAND WALLACE.

No.26 · · · BLACKBURN SHARK.

No.27...WESTLAND LYSANDER MK.1 or MK.3.

No.28...JUNKERS JU87G STUKA.


No. 29... DE HAVILLAND MOSQUITO MK.4 or MK.6.







PART DRAWINGS AND PART NUMBERS (Before Assembling Your Kit)


Read these instructions carefully before assembling your model and check the exact fit of the parts before cementing. Clean off excess plastic, if any, with a sharp knife or a file. Since many tiny parts are included, check themwith the assembly drawing before assembling. Do not tear off parts from the stem, but cut them off carefully with nippers or tisnips. Do not cut off all of the parts at the beginning, but cut each part to be assembled one by one to assure each part being properly identifed. Do not use too much adhesive because surplus adhesive will spoil the appearance.

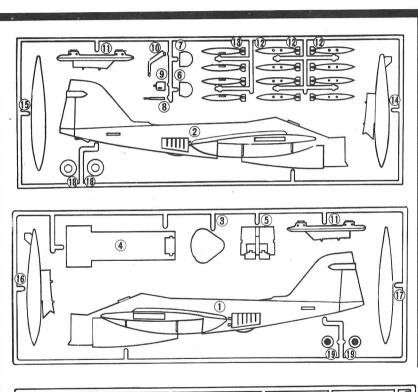


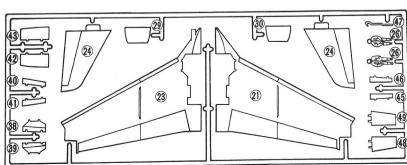

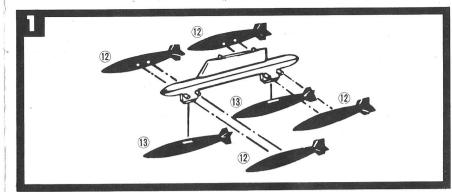



1 Bonb assembly.

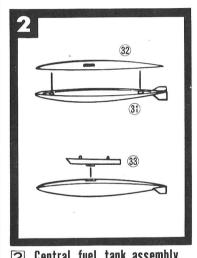

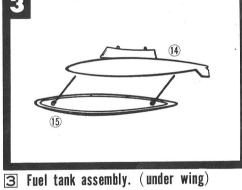


2 Central fuel tank assembly.

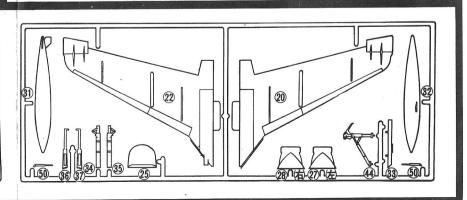

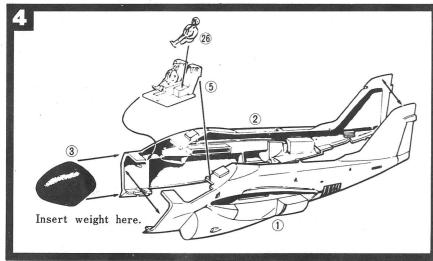


4 Assembly of cockpit, radome and fuselage.

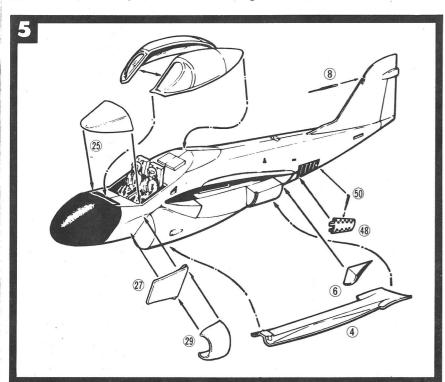


5 Fixing of instrument panel, canopy, air intake, exhaust nozzle, air brake and pitot tube.

• Cement part 4 before fixing air intake.

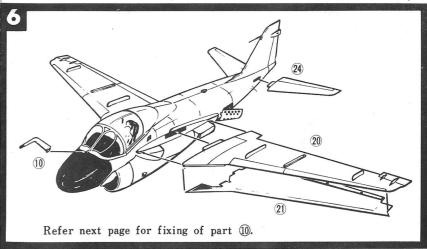


6 Assembling of main wing and stabilizer.

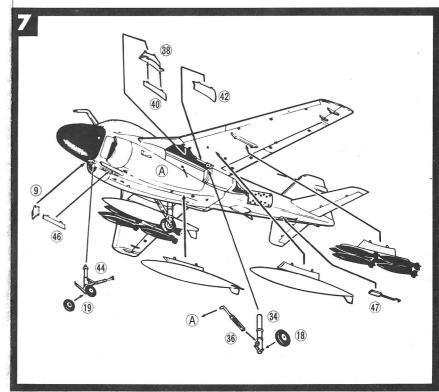

Fixing of bombs, additional fuel tanks, landing hook, wheels and covers.

Reference drawing for painting and decals.

- Refer painting guide on package for ship No. 401.
- Apply same color on upper and lower side of fuselage as ship No 401 to ship No.513.

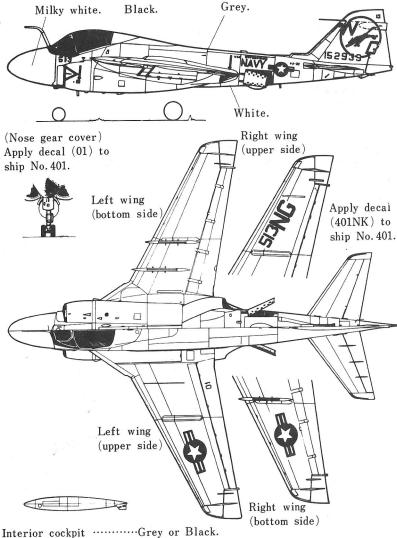

Interior cockpitGrey or Black. Instrument panelWhite or Yellow or Red.

Pilot suitOrange.

Pilot shoesBlack.

BombBlack or Brown. Fuel tankWhite.

WheelWhite.
TireBlack (semi gloss).
Inside of air intakeWhite.

PRINTED IN ENGLAND

