

The Flugabwehrkanonenpanzer Gepard, better known as the Flakpanzer-1 Gepard, was first developed from the Leopard-1 in the 1960's and entered service with the German Army in 1973. 420 of these SPAAG's were built for the Bundeswehr, and also served with the armies of the Netherlands, Belgium. Currently, Brazil, Chile, Jordan, and Romania.

The Gepard features an electrically powered turret housing a pair of belt fed 35 mm L/90 Oerlikon KDA automatic cannons which can provide a combined rate of fire of 1,100 rounds/minute of a mix of AA & AP rounds up to an effective range of 5,500 meters. The weapons are guided by a search radar at the rear of the turret and a tracking radar on the front, providing 360 scanning out to a range of 15km.

The crew of 3 enjoys full NBC protection, while the turret provides protection against small arms and shell fragments. The Gepard is powered by a 830hp diesel engine, which can be replaced in the field within 20 minutes. The Gepard is also equipped with a 4-cylinder diesel Daimler-Benz MTU-Motor for operating the weapon system while the vehicle is not running.

READ BEFORE ASSEMBLY

CAUTION

- Read carefully and fully understand the instructions before commencing assembly. A supervising adult should also read the instructions if a child assembles the model.
- When assembling this kit, tools including knives used. Extra care should be taken to avoid personal injury.
- Keep out of reach of small children. Children must not be allowed to suck any part, or pull vinyl bag over their heads.













PAINTS REQUIRED

Color info and profiles by Mig Jimenez



















APPLYING DECALS

- 1.Clean the model surface with a wet cloth.
- 2.Cut out each decal design from sheet, and dip it in tepid water for 15~20 sec.
- 3. Hold the backing sheet edge and slide decal onto the model.
- 4. Move decal into position by wetting decal with finger.
- 5. Press decal gently down with a soft cloth until excess water and air bubbles are gone.

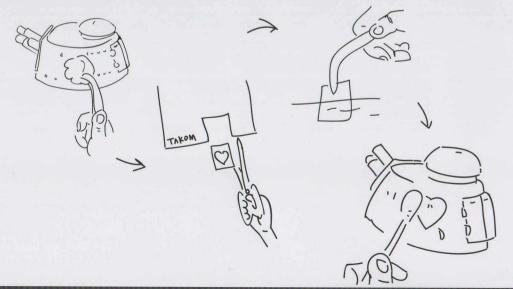

REMOVING PE

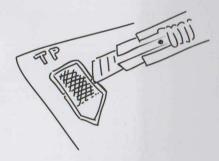

Be careful not to hurt when removing PE parts.




Secure using instant glue (not included).





Finish using file.


PARTS

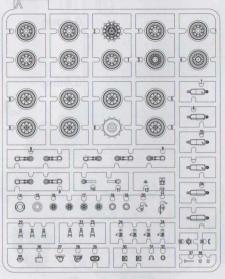



X2

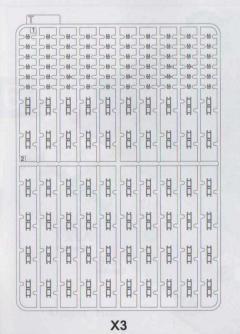


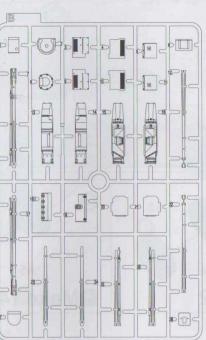

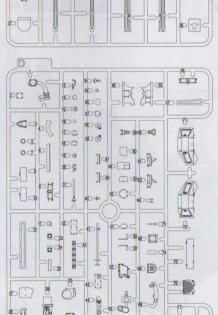

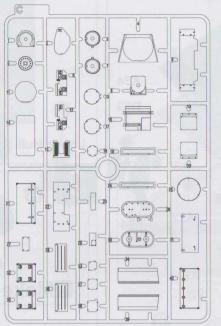

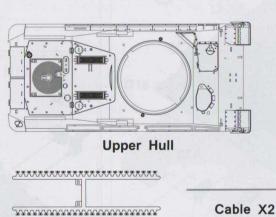

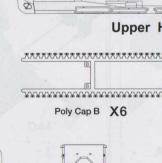









Turret



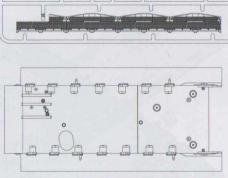

0

Lower Hull




Decal





002 003


003


TP

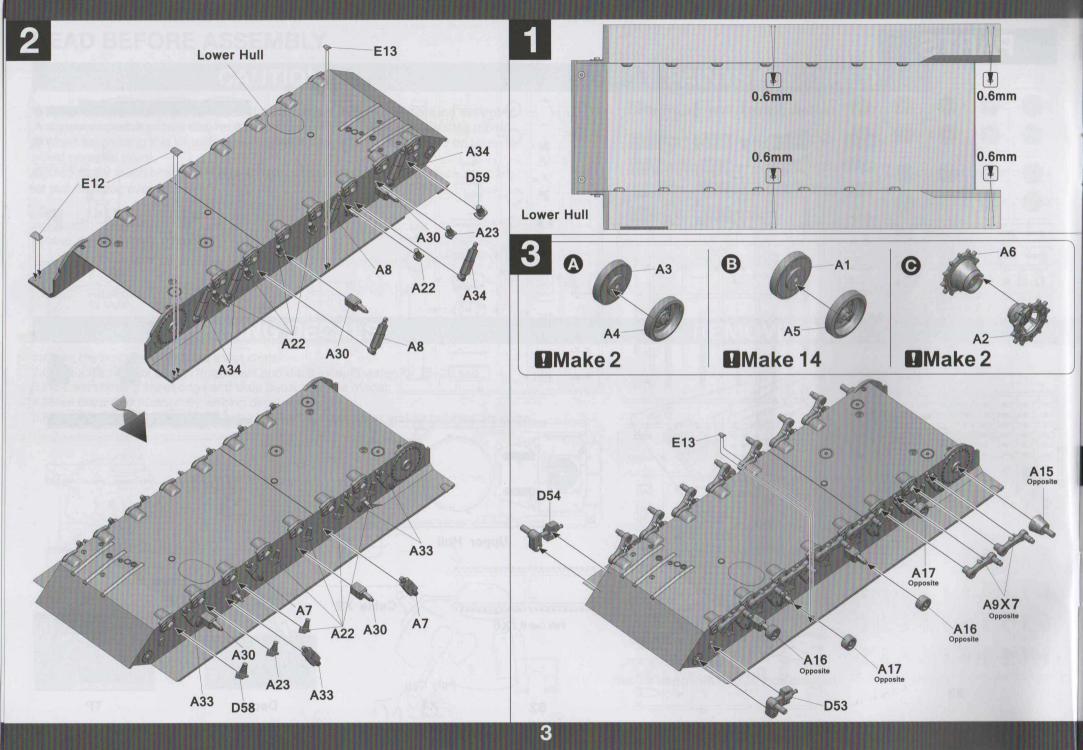


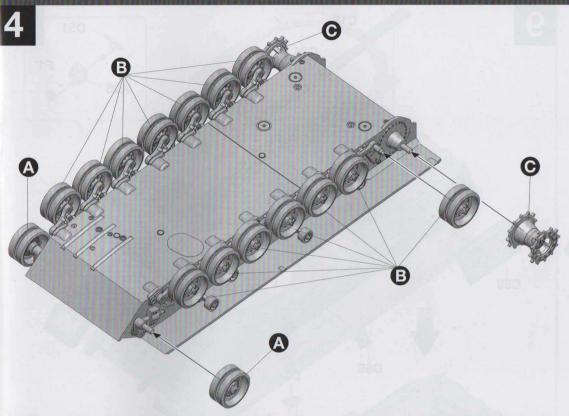


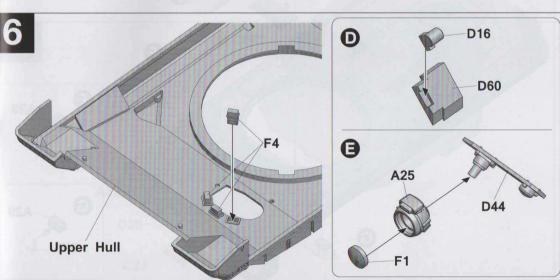


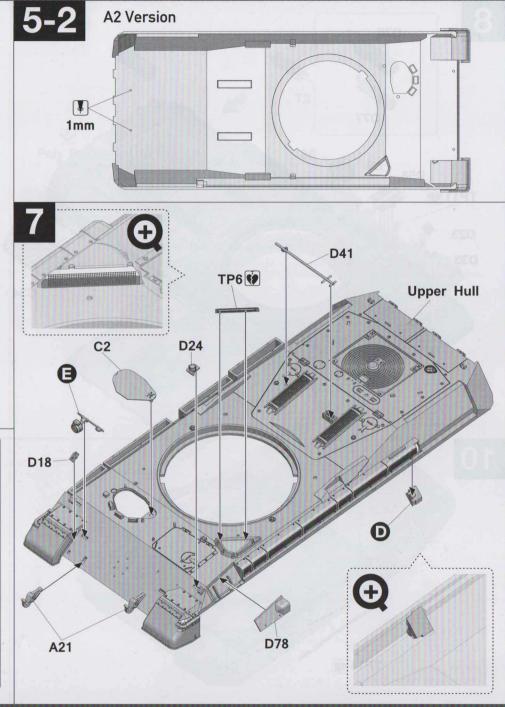


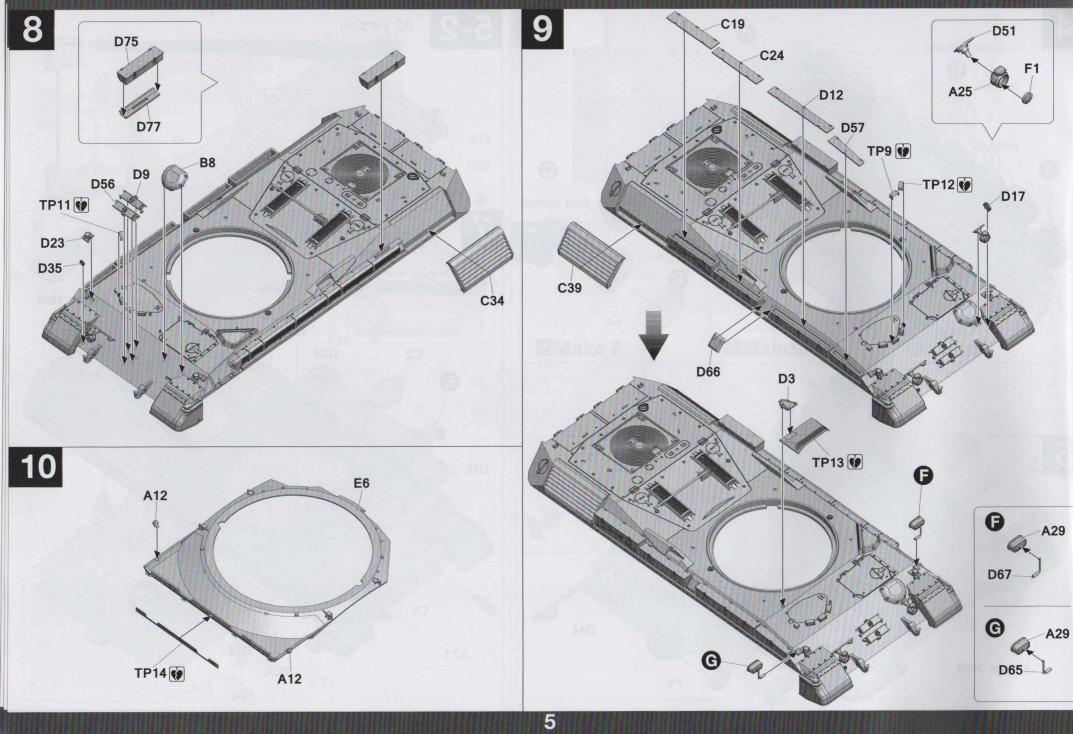


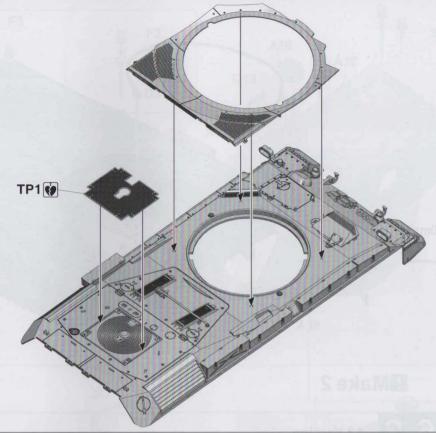


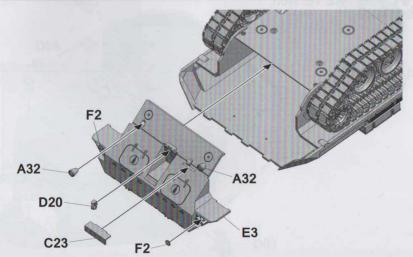

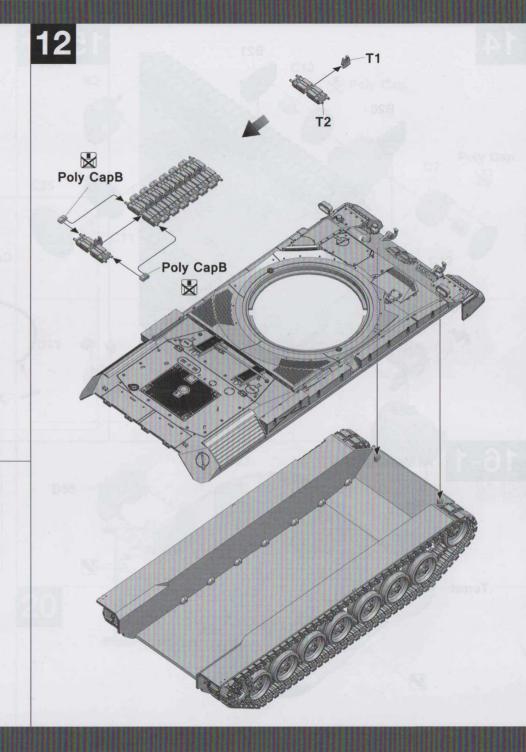


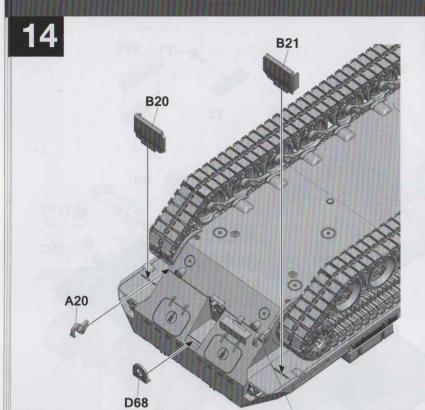


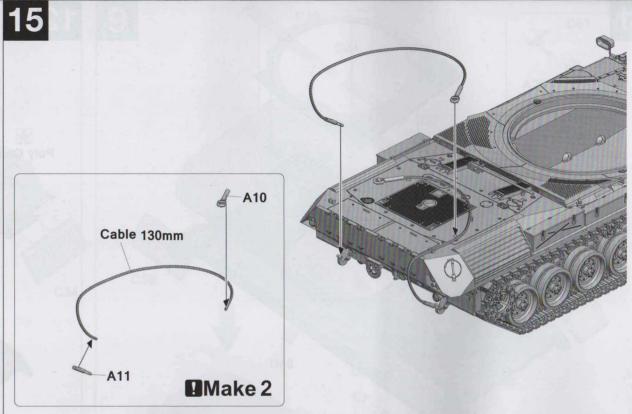


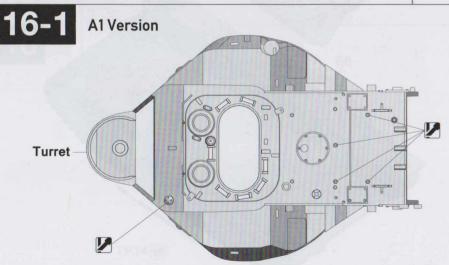



A20

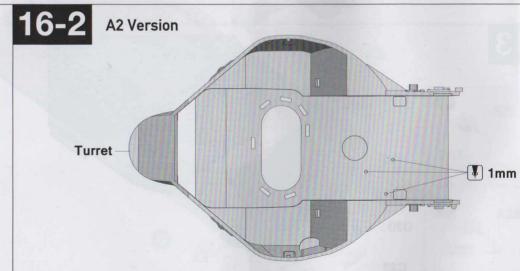

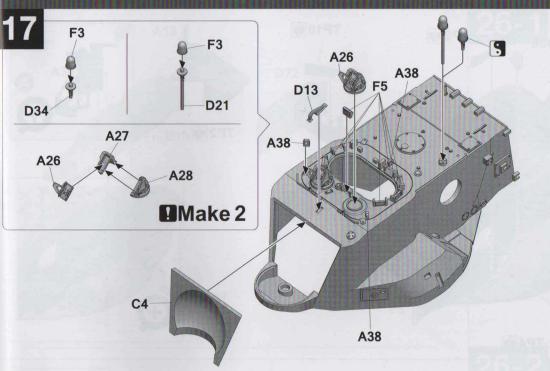


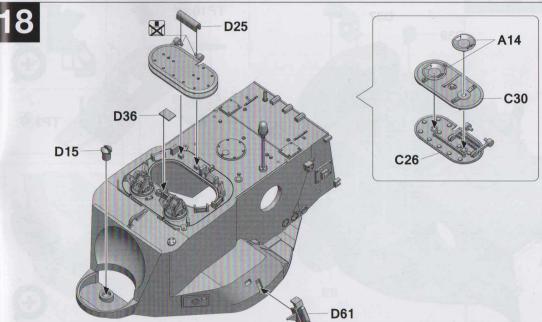


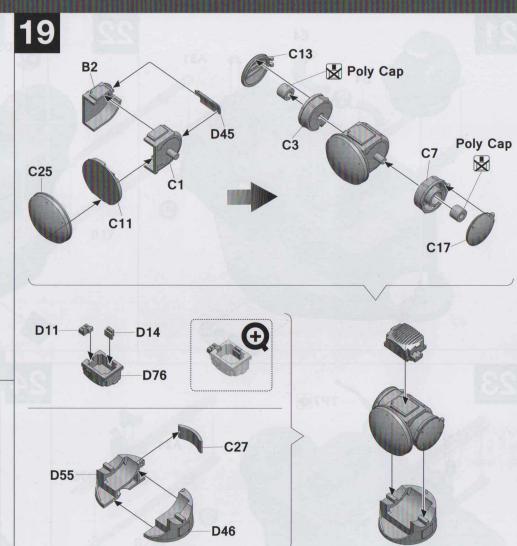


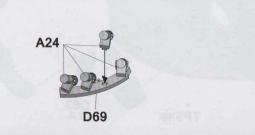



21 E4 A31 A31

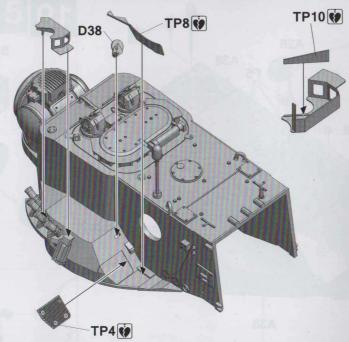


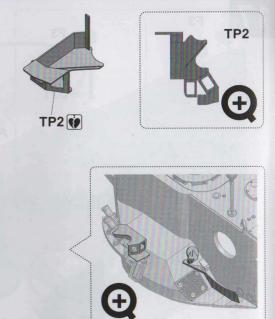

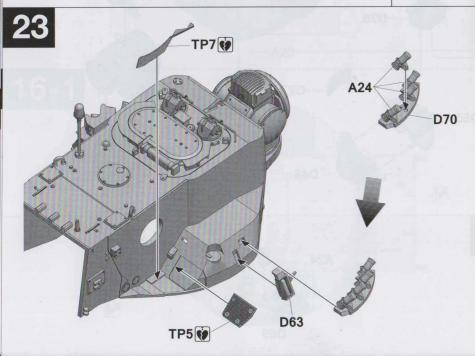


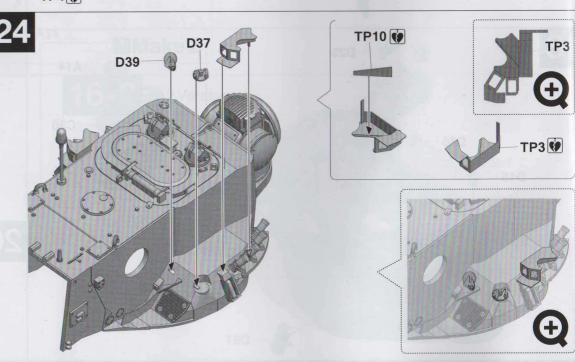


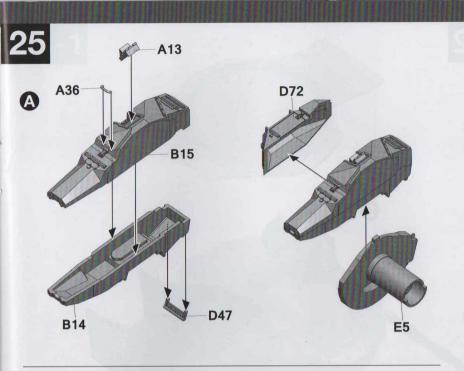


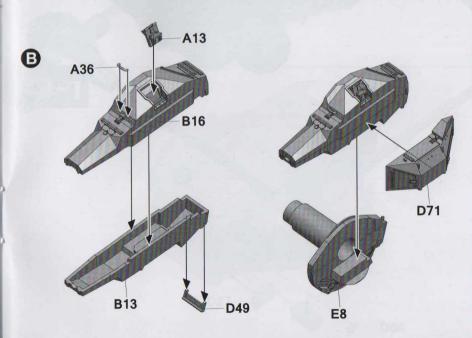



26-1

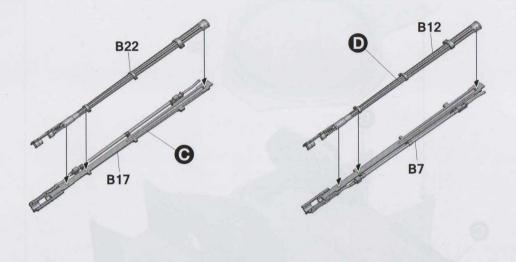


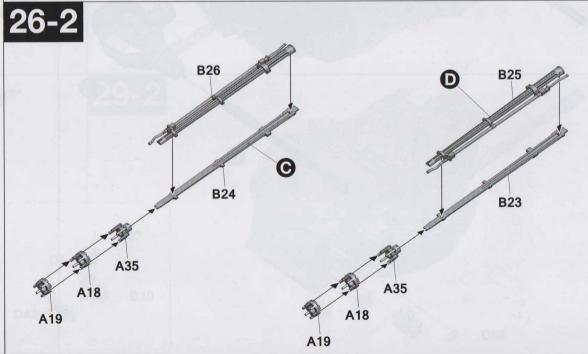

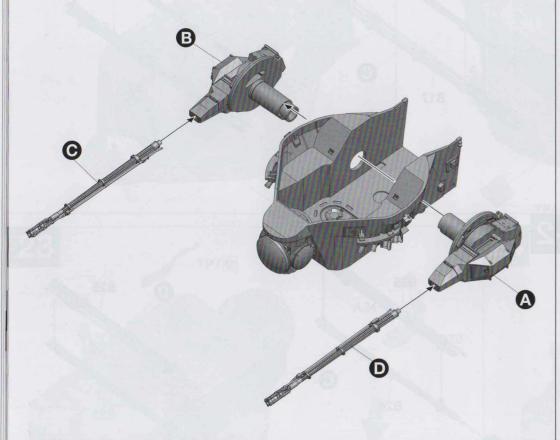

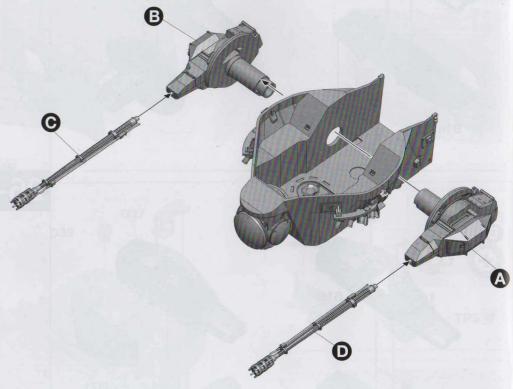

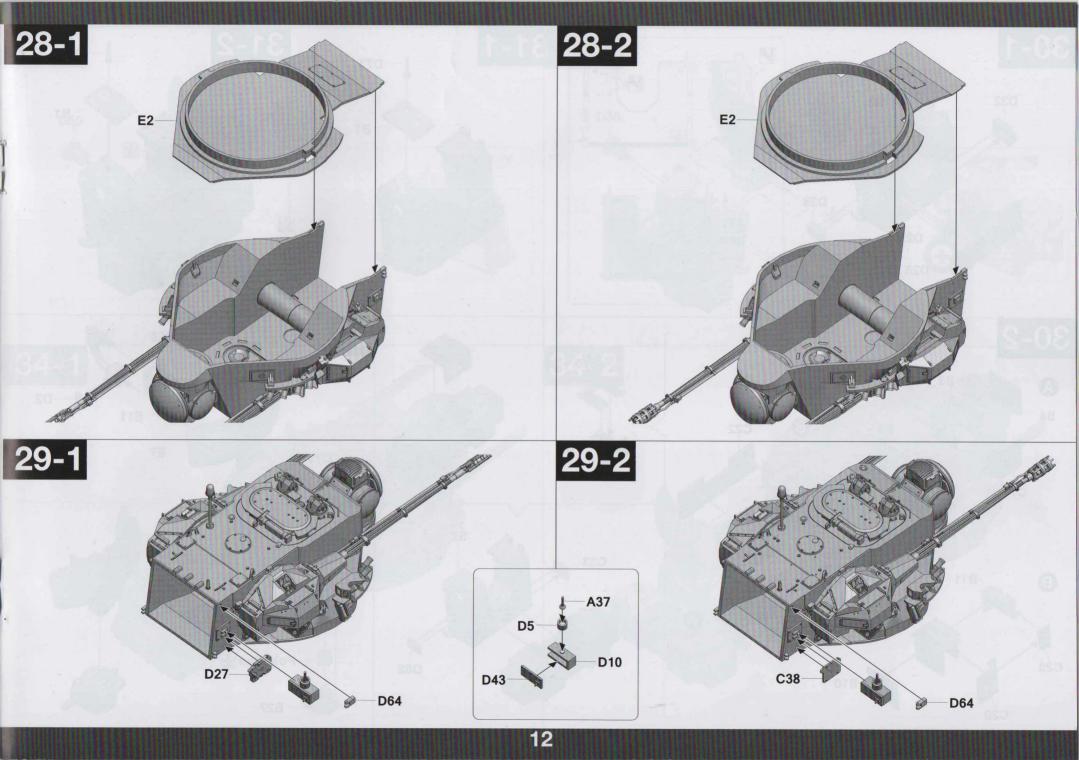


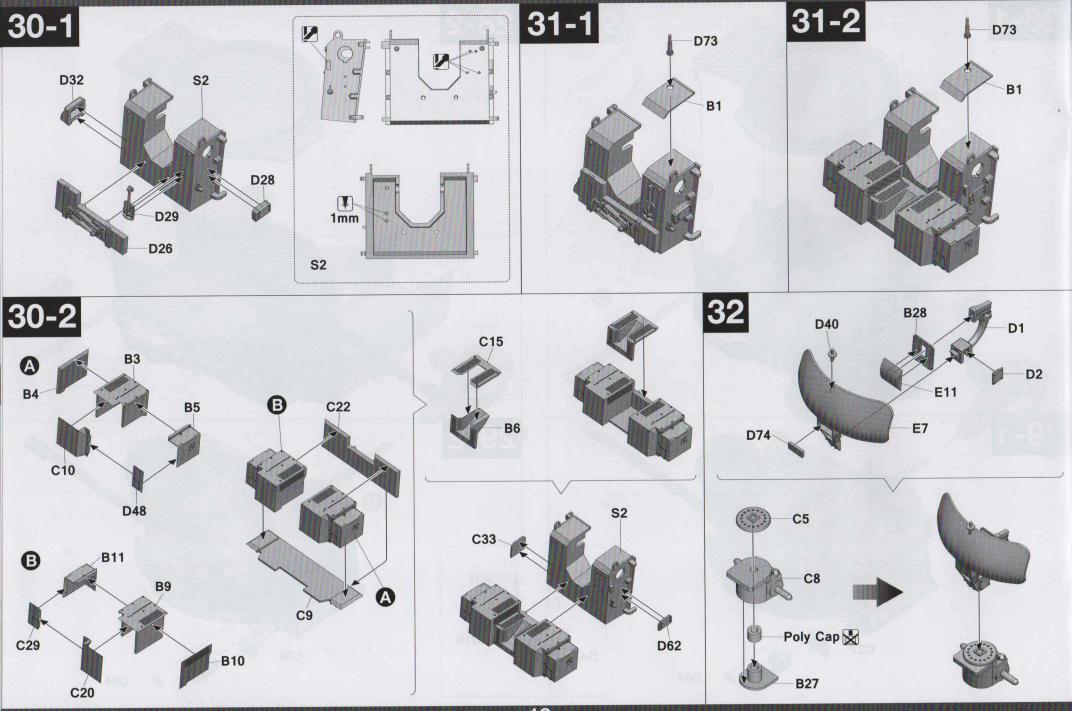


33-1 D50 E9




33-2

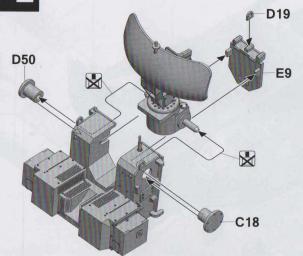

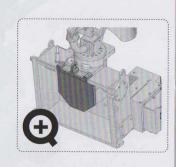



34-1

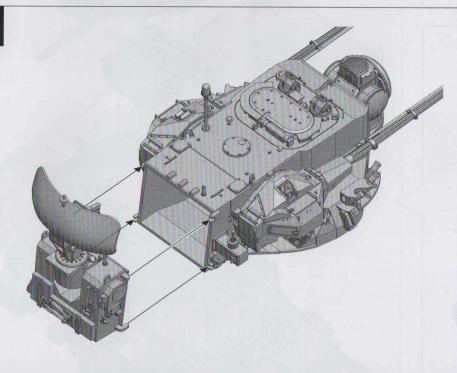



D33


34-2

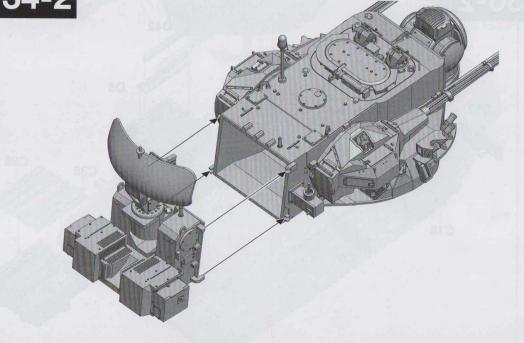

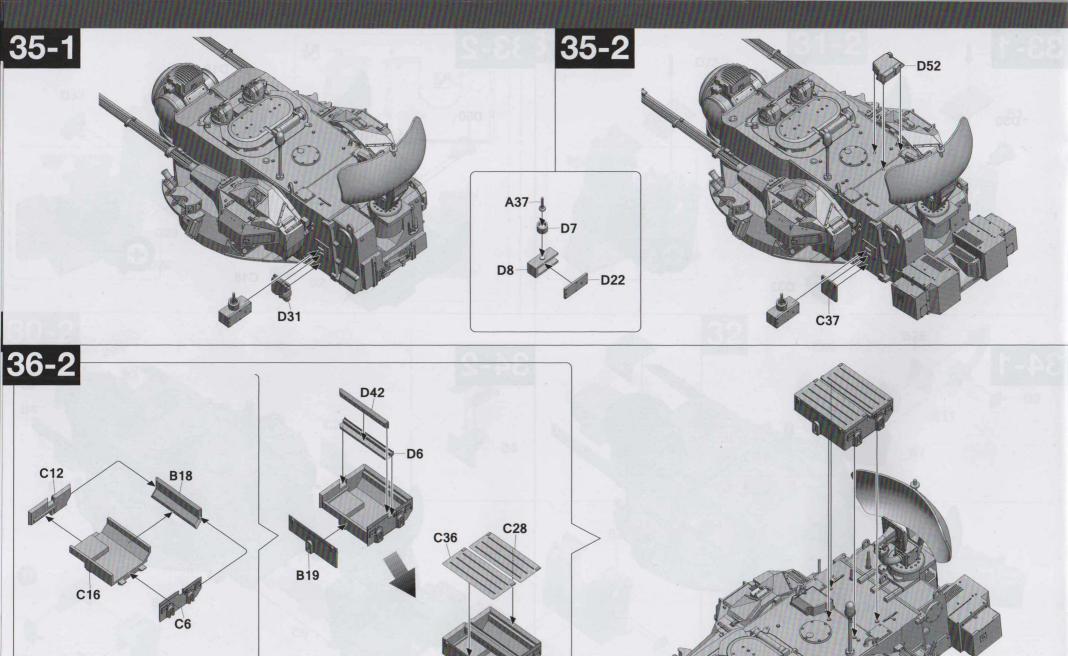

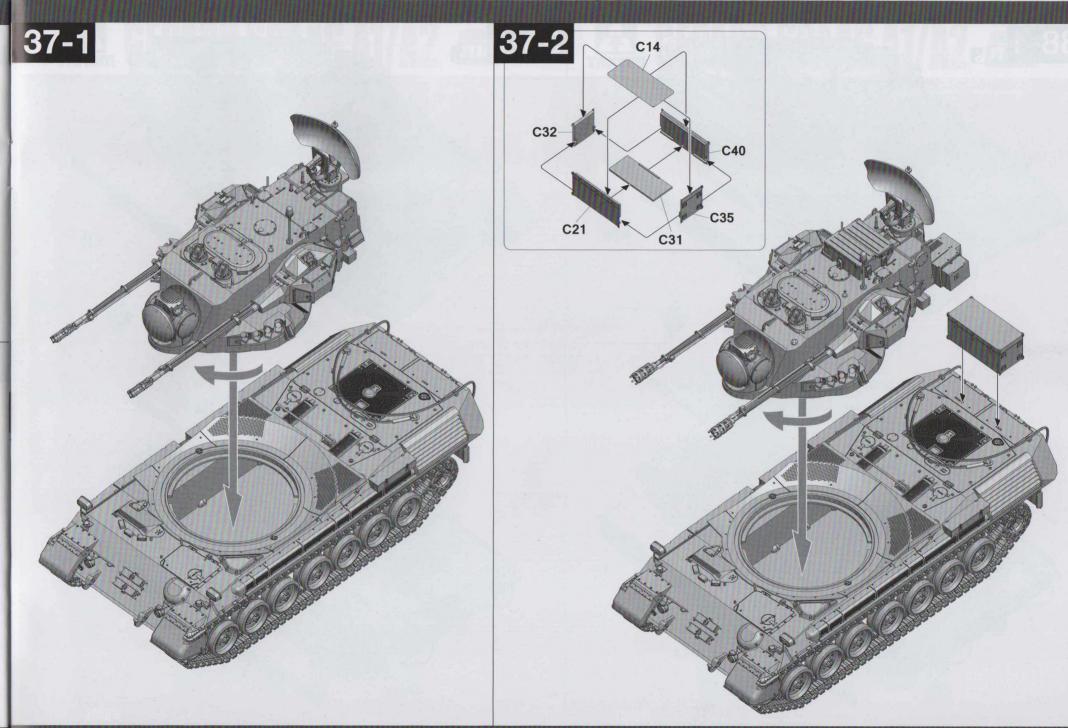

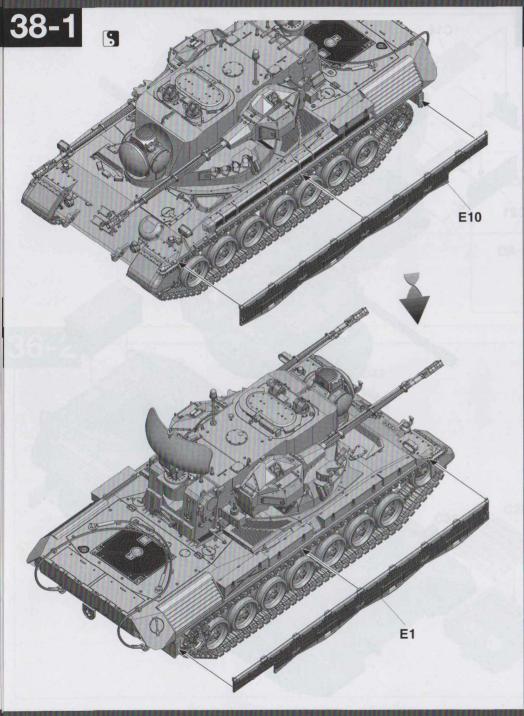


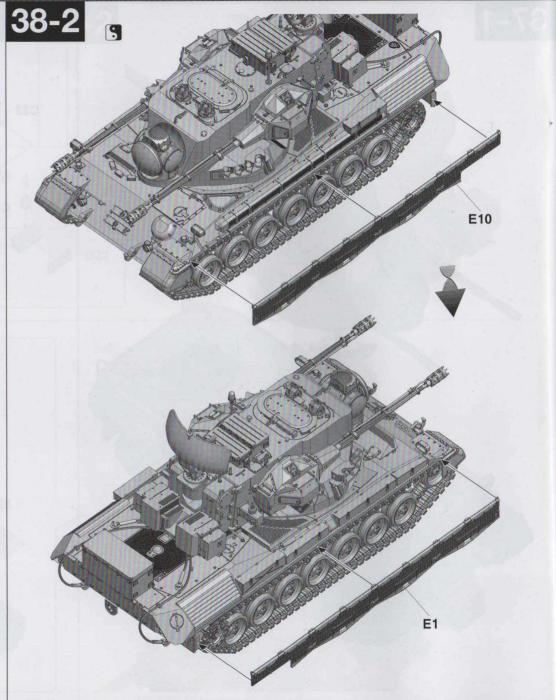




03.03.2044

Color info and profiles by

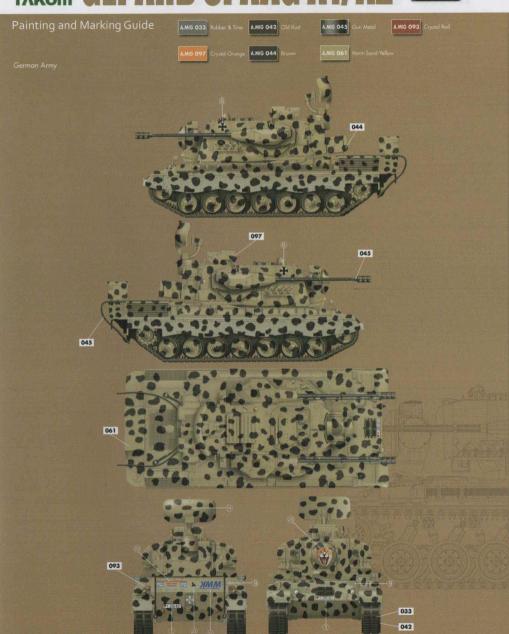

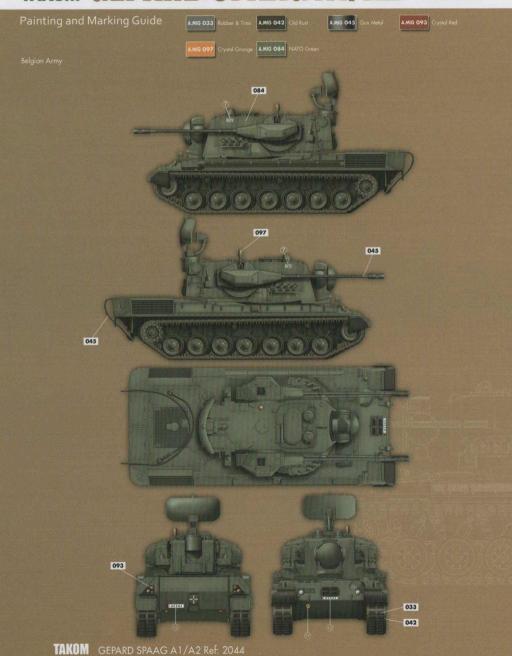



03.03.2044

Color info and profiles by

A.MIG 093

A.MIG 085

A.MIG 084

A.MIG 085











TAKOM GEPARD SPAAG A1/A2 Ref: 2044



TAKOM GEPARD SPAAG A1/A2 Ref: 2044




03.03.2044

Color info and profiles by



TAKOM GEPARD SPAAG A1/A2 Ref: 2044

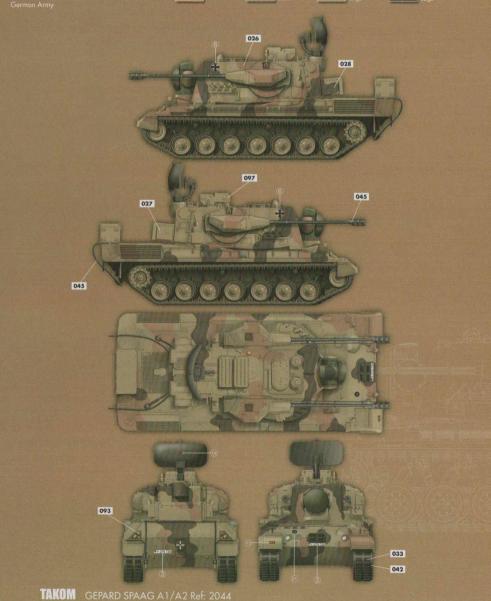



03.03.2044

Color info and profiles by

A.MIG 033 R


A.MIG 045

A.MIG 093 Crystal Red


A.MIG 093 Crystal Red

046


045

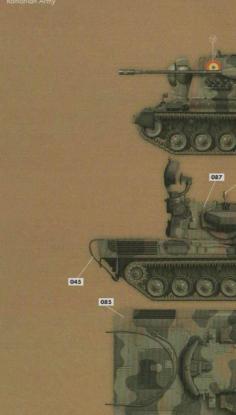



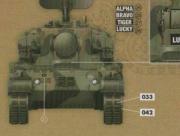

TAKOM GEPARD SPAAG A1/A2 Ref: 2044

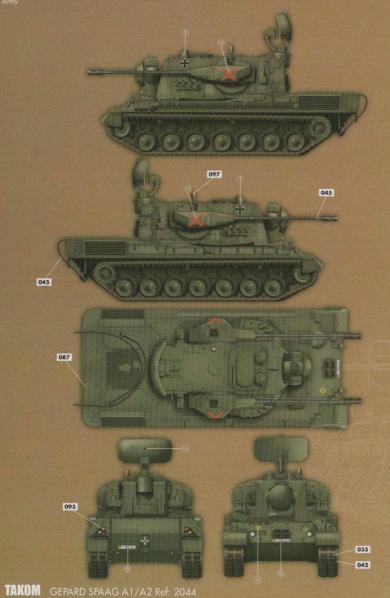










2016/2044

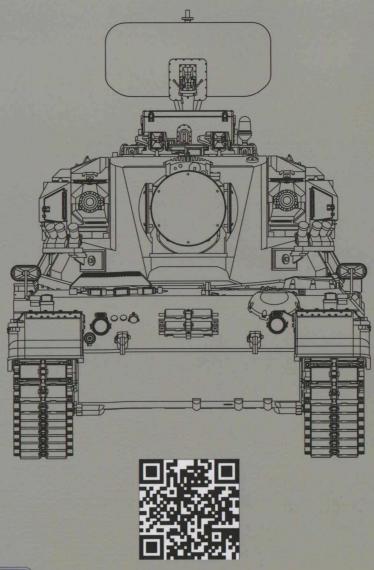

You can find TAKOM on Facebook.com

#2044X

