
## **ITEM NO.:07111**

# **Russian ChTZ S-65 Tractor with Cab**

俄罗斯S-65拖拉机-带驾驶舱

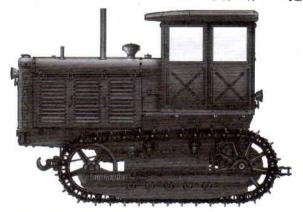

## READ BEFORE ASSEMBLY:

- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements,sprue cutters,long nose pliers,,modeling knife, small files, tweezers, pin vise & scissors, Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.

## 装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件,不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量的快干胶水使用可能导致可动零件会粘住、小心涂胶。
- 取蚀刻片时应特别注意安全, 防止利边划伤手指。
- 某些零件表面需贴上水贴纸, 请选择在装配的同时进行。
- 推荐模型工具(自备): 胶水,水口剪刀,长咀钳,刀片, 锉刀,镊子,钳,钻,剪刀,瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆,模型内不含。



cyanoacrylate glue 使用强力胶



weight 配軍



make hole 钻孔



cut / remove



bend



file / sand 继亚



option 选择



no cement 不涂胶水



decal 贴纸



Install it first

#### 水贴纸的使用:

- 1. 从水贴纸上剪下印花;
- 2. 将印花放入温水中浸10秒,然后放在干净布上。
- 3.拿着印花纸板将印花移到模型上;
- 4. 手指蘸水将印花移到适当的位置;
- 5.用软布轻压印花直至水干,汽泡消失。

#### DECAL APPLICATION

- Cut off decal from sheet.
- Dip the decal in tepid water 40°C for about 10 sec. and place on a clean cloth.
- Hold the backing sheet edge and slide decal onto the model
- 4. Move decal into position by wetting decal with finger.
- Press decal gently down with a soft cloth until excess water and air bubbles are gone.
- 6. Allow decal to dry completely before handling model.

# 部品图

Parts

Α

